

MESA STYLUS REPLACEMENT TIPS INSTRUCTIONS


****IF PURCHASED AFTER MARCH 2013****

DISASSEMBLY

1. Unscrew Plated Ring from Threaded Coupler.

ASSEMBLY

2. Place Replacement Tip onto Threaded Coupler.
3. Screw Plated Ring back onto Threaded Coupler and now you are ready to enjoy your stylus.

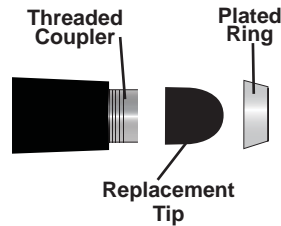

MESA STYLUS REPLACEMENT TIPS INSTRUCTIONS


****IF PURCHASED AFTER MARCH 2013****

 DISASSEMBLY


1. Unscrew Plated Ring from Threaded Coupler.

ASSEMBLY

2. Place Replacement Tip onto Threaded Coupler.
3. Screw Plated Ring back onto Threaded Coupler and now you are ready to enjoy your stylus.

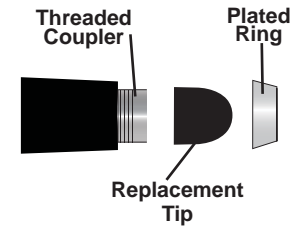

****IF PURCHASED BEFORE MARCH 2013****

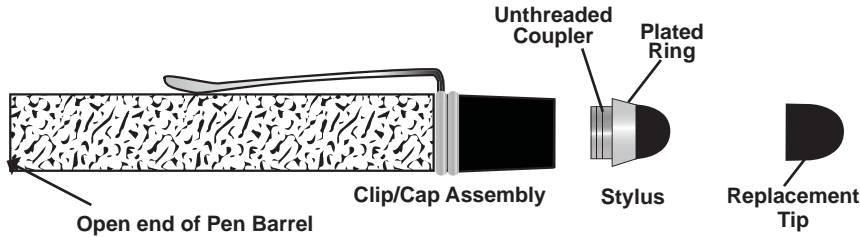 

DISASSEMBLY

1. Separate upper and lower sections of the pen (barrel, cap/clip assembly and stylus)
2. Unscrew stylus section from clip/cap assembly.
3. Pull out old rubber stylus tip.
4. Set stylus metal parts on top of the open end of pen barrel.
(This is just being used to hold the pieces in place)
5. Use small dowel or soft non-marring item to tap the non-threaded coupler out of the gold ring.


ASSEMBLY

6. Place a new stylus tip onto the Coupler.
7. Slide plated ring over stylus tip to secure.

Note: If you feel the ring is not holding securely, use a drop of glue.

8. Screw back into clip/cap assembly.
9. Reassemble pen.

****IF PURCHASED BEFORE MARCH 2013****

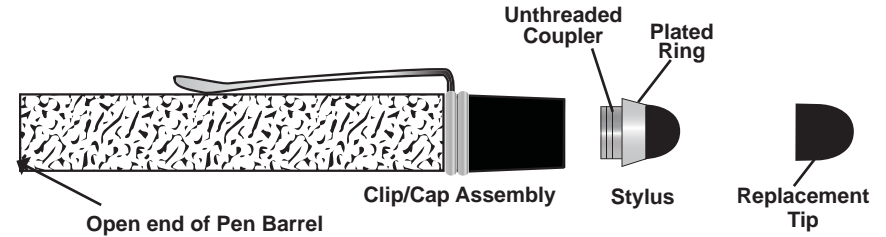

DISASSEMBLY

1. Separate upper and lower sections of the pen (barrel, cap/clip assembly and stylus)
2. Unscrew stylus section from clip/cap assembly.
3. Pull out old rubber stylus tip.
4. Set stylus metal parts on top of the open end of pen barrel.
(This is just being used to hold the pieces in place)
5. Use small dowel or soft non-marring item to tap the non-threaded coupler out of the gold ring.

ASSEMBLY

6. Place a new stylus tip onto the Coupler.
7. Slide plated ring over stylus tip to secure.

Note: If you feel the ring is not holding securely, use a drop of glue.

8. Screw back into clip/cap assembly.
9. Reassemble pen.