

DIAMOND PAINTING TOOL

Instructions


Kit Features

- Diamond Painting Tip
- 3/8" x 1-1/4" long

Required Accessories & Materials

- 7/32" drill bit
- Sanding and finishing supplies
- Blank size: Approximately 3/4" x 3/4" x 5" long

Diagram A - Parts and Assembly

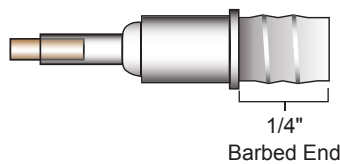

BLANK PREPARATION

The blank size will vary based on the profile of your design. Generally, the size of your wood or acrylic blank should be 3/4" x 3/4" x 5" long. Mark the center of the blank on the end. Using a medium drill speed, drill a 7/32" diameter hole 3/8" deep. Don't force the drill bit; use an even pressure and let the bit do the work.

TURNING THE DIAMOND PAINTING TOOL

Set up the blank between centers as shown in Diagram B. **Turn** the blank to your own profile design. **Sand** with abrasives and finish with your choice of polish.

ASSEMBLY

WoodTurningz recommends pushing the tip in by hand (barbed end first). Your Diamond Painting Tool is ready to use!

Diagram B - Turning the Handle

