

Crochet Necklace Kit

Kit Features:


- Adapts to all PSI Crochet Hooks
- Attaches/Removes easy with magnetic clasp
- Easy to make single tube design

Required Accessories:

- 7mm, Pen Mandrel
- 8mm Drill Bit #PKPARK-8MM
- 8mm Barrel Trimmer (use from #PKTRIMKIT)
- 3 pc. Bushings Set #PKSRBU (use 2 of the 3 in the set for each style)
- 2 part glue, epoxy or Insta-cure (cyanoacrylate).




DIAGRAM A / PARTS LAYOUT

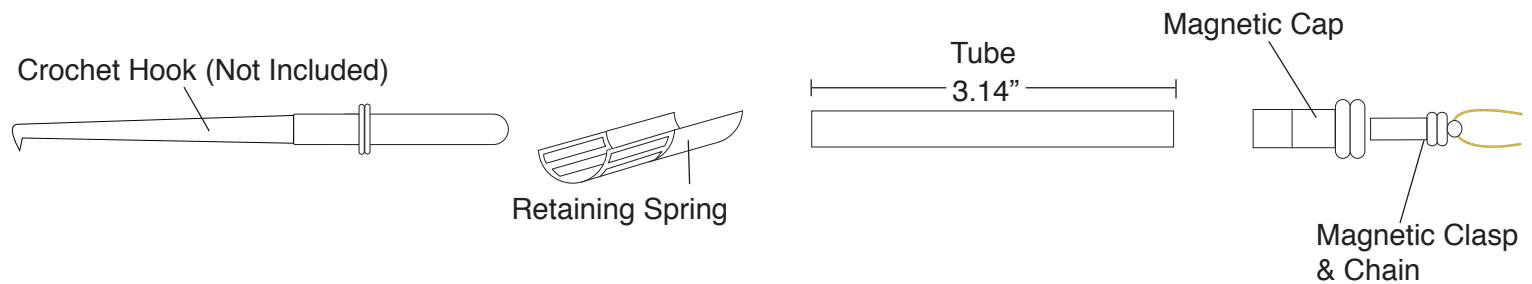

Preparing the Blank:

- Prepare and cut a blank of 3/4" or larger, to the length of the brass tube (add 1/16" for trimming)
- Drill a 8mm hole through the center of the blank.
- Spread glue over the tube, insert into blank with a twisting motion to spread the glue evenly inside.
- Center the tube inside the blank.
- When glue is dry. Trim the ends of the blank flush to the tube.

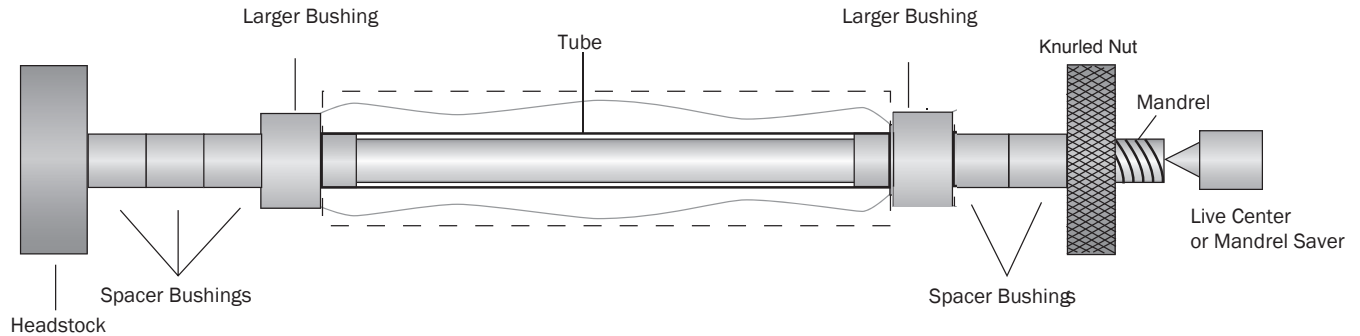DIAGRAM B / TURNING THE BLANKS**Turning the Blank**

- Place the bushings and blank on the mandrel according to Diagram B.
- Use the larger end bushings.
- Thread on the knurled nut and hand tighten to hold all items in place.
- Slide the tailstock to the mandrel shaft, (do not overtighten, it could damage the mandrel) lock in place.
- Turn the handle ends down, flush with the bushings using the lathe tools, gradually increasing the grades of sand paper.
- Finish the wood with friction polish or use any PSI project finish of your choice.

Assembly

- Press the magnetic cap, narrow end in first into the upper end of the barrel.
- Squeeze the solid end of the retaining spring to a small round circle (DO NOT CREASE) and insert into opening at the end. Push in, flush to the surface.
- Slide the crochet hook in and out with both ends to assure a secure fit.
- If spring does not hold in properly (i.e. the spring slides into the tube), Take a Q-tip and dip into CA glue insert the spring and allow the CA to dry. The spring should now operate properly.
- When not in use, reverse the crochet hook to safely store the hook inside the tube.
- Insert the chain through the small ring on the magnetic bar, lock the clasp.
- Insert the bar into the magnetic cap.

Diagram C / Bushings #PKSRBU